


Direct Adhesion

Be certain that your substrate will hold an adequate bond to the recommended adhesive. If in doubt about a coating or a finish already in place, an adhesion mock up test is recommended before you begin.

Move the Texture panel to a clean table or solid surface. Place the panel face down so that the nubs attached on each flap will thus be facing up. With one hand, gently lift the short edge of one side of the panel by 8"-10" off the surface. With your other hand, gently push down on each of the flaps to move them downward until the nubs are now in line with the rest of the panel surface. This will move the textured flap out and engage the hinge edges of each flap. Repeat until all flaps are moved equally into position, then gently rest the panel on the solid surface, still face down. When properly moved forward in the proper movement, you will see no gap behind the edges of the hinges when viewed from the face.

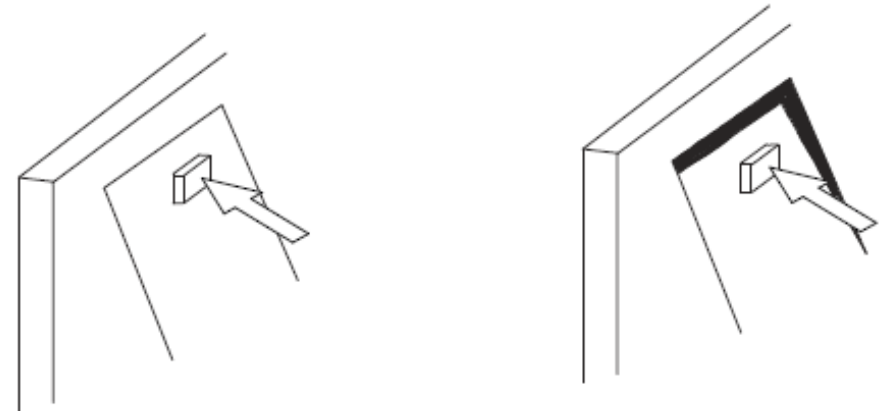

Back View

Once all of the panels have been properly sized and trimmed, begin the application of the adhesive to the **BACK SIDE (ONLY)** of each panel. Use only Liquid Nails LN2000 adhesive tubes.

Place the cartridge into the caulking gun, cut the nozzle to produce a 1/4" thick bead and puncture the inner seal. A 1/4" bead will cover approximately three 4' x 9' sheets per 9 fl oz tube.

Zintra Acoustic Textures



Installation Instructions

Direct Adhesion

First apply a bead around the entire perimeter of the BACK of the panel. Place the bead to be no more than 1" in from the perimeter at any point. Next, apply a zig zag or diagonal pattern of additional adhesive across the central sections of the panel, within the perimeter bead. See the images on the next page for guidance.

Adhesive

Method of application in addition to the adhesive applied to each nub per the following page

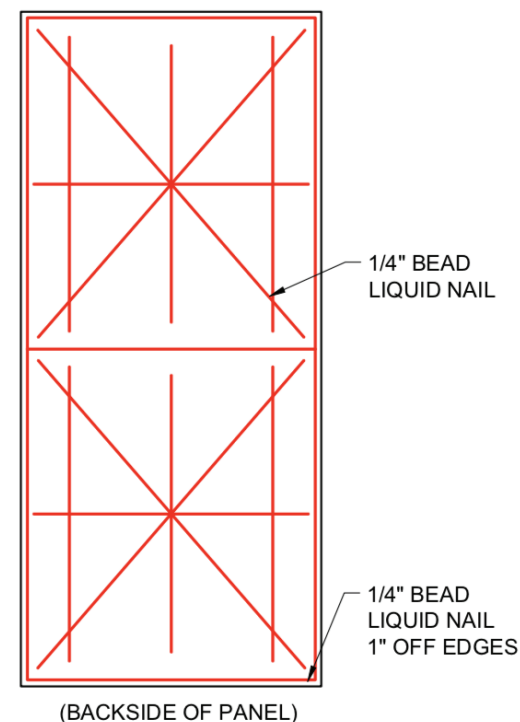
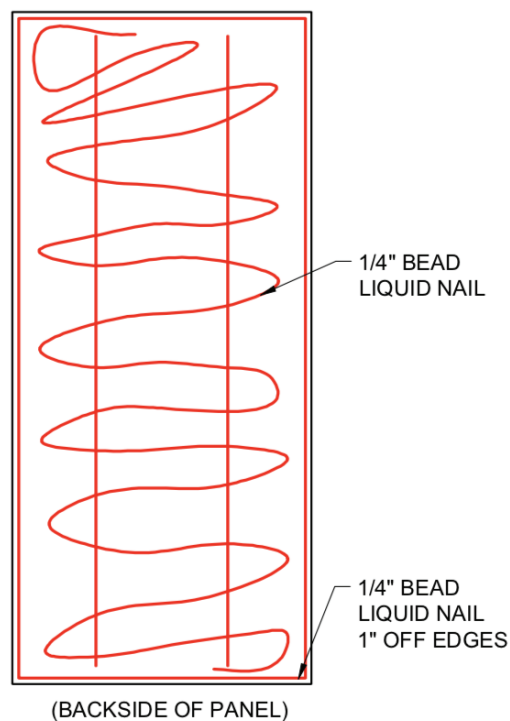


Zintra Acoustic Textures

Installation Instructions

Direct Adhesion


Place a dime sized spot of adhesive on each nub. This will help to secure the nubs to the wall. Any nubs that have been knocked loose in handling can be re-applied with a dime sized spot of adhesive to re-adhere it to the tip of the flap from where it was knocked loose. Each hinged flap is designed to have one nub, so verify that none have been knocked loose from handling.

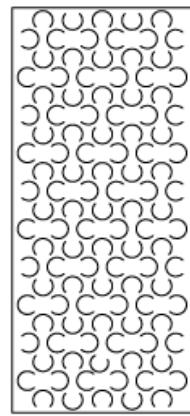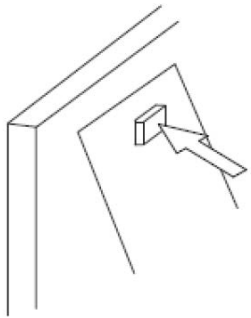


TRAPPE



VAGUE

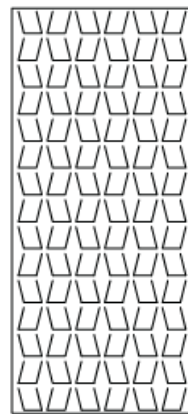


CARRE

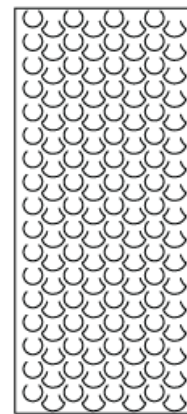


CERCLES




CORBE

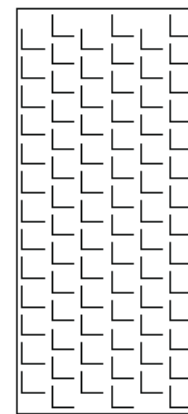


DIAMONT

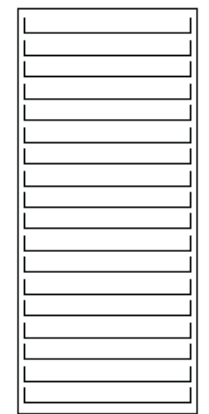

DROIT

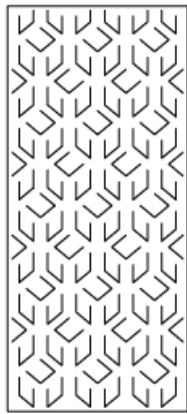


TESSAN

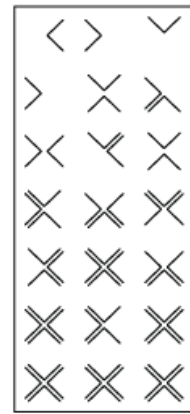


SIGNE




PAUME

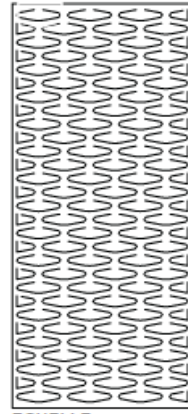

ECHELLE

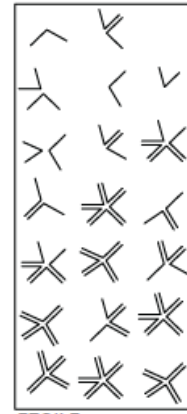


ETOILE

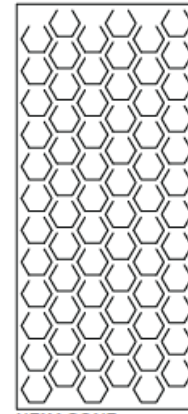

HEXAGONE



NENUPHAR

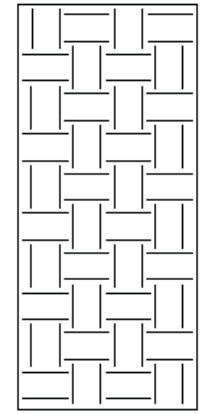

TISSAGE

Zintra Acoustic Textures

Installation Instructions

Direct Adhesion

Apply the panel to the substrate within 10 minutes and monitor your adhesive to prevent it from skinning over. Set the panels into place and smooth with open palms.


Now, remove the panel from the substrate and hold it off the surface for one minute. Then reset the panel into place and smooth with firm pressure to set it. Use mechanical fasteners if you see the need to help this stay positioned while the adhesive remains wet.

Never use solvent based contact adhesives or any unauthorized adhesives.

Install all panels by maintaining the identical orientation of the sticker (and thus of the panel) for each and every panel installed. Do not reverse or flip panels.

Make sure that all flaps have properly risen off the surface. If a small relief cut is needed for any flap edge that was not fully freed to rise, use a utility knife to make that minor cut now, from the surface face of the panel.

With clean hands, run flat hands/palms along all of the surface making contact to the wall for a second time, applying flat firm pressure to enhance the bond. Firmly set any loose areas at this time.

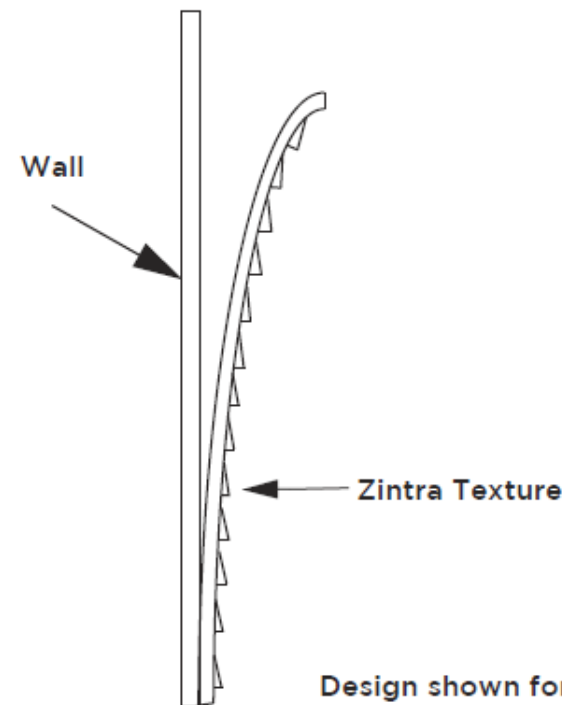

Design shown for reference only, same install instructions apply for all designs