
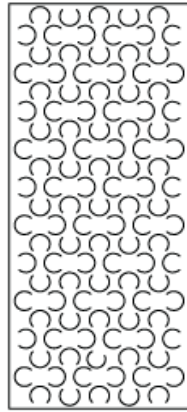


Zintra Acoustic Textures

Installation Instructions

Direct Adhesion


Place a dime sized spot of adhesive on each nub. This will help to secure the nubs to the wall. Any nubs that have been knocked loose in handling can be re-applied with a dime sized spot of adhesive to re-adhere it to the tip of the flap from where it was knocked loose. Each hinged flap is designed to have one nub, so verify that none have been knocked loose from handling.

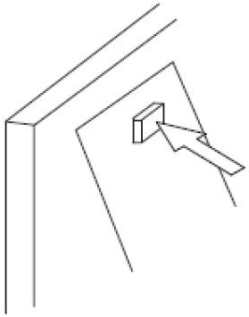


TRAPPE



VAGUE

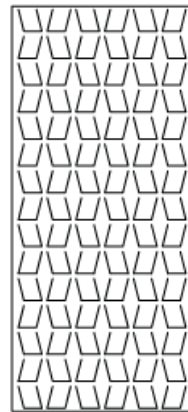


CARRE

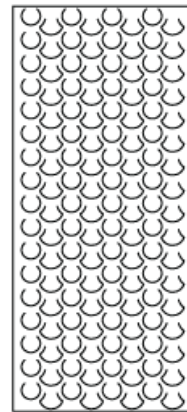


CERCLES




CORBE

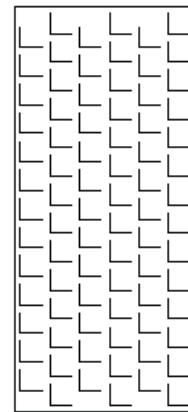

DIAMONT

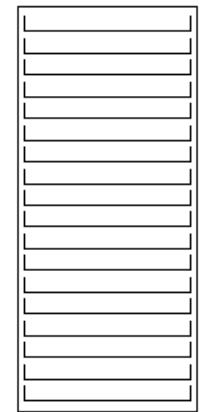

DROIT

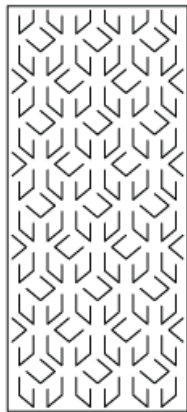


TESSAN




SIGNE




PAUME

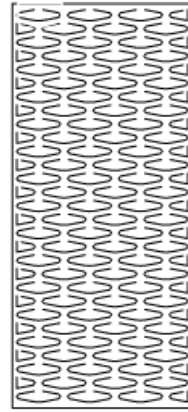

ECHELLE

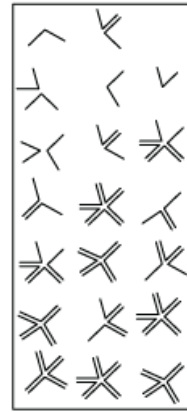


ETOILE

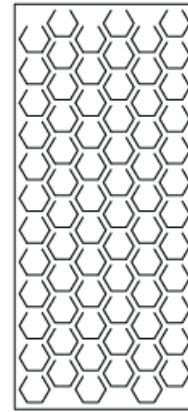

HEXAGONE



NENUPHAR

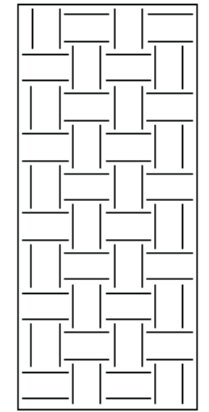

TISSAGE

Direct Adhesion

Apply the panel to the substrate within 10 minutes and monitor your adhesive to prevent it from skinning over. Set the panels into place and smooth with open palms.


Now, remove the panel from the substrate and hold it off the surface for one minute. Then reset the panel into place and smooth with firm pressure to set it. Use mechanical fasteners if you see the need to help this stay positioned while the adhesive remains wet.

Never use solvent based contact adhesives or any unauthorized adhesives.

Install all panels by maintaining the identical orientation of the sticker (and thus of the panel) for each and every panel installed. Do not reverse or flip panels.

Make sure that all flaps have properly risen off the surface. If a small relief cut is needed for any flap edge that was not fully freed to rise, use a utility knife to make that minor cut now, from the surface face of the panel.

With clean hands, run flat hands/palms along all of the surface making contact to the wall for a second time, applying flat firm pressure to enhance the bond. Firmly set any loose areas at this time.

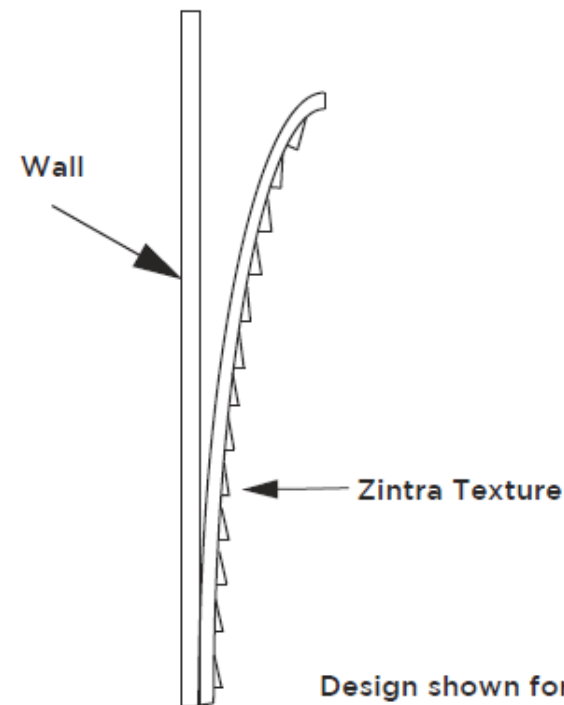

Design shown for reference only, same install instructions apply for all designs