

**Check Before  
Cutting:**

First, confirm that all of the materials you have received match what was ordered and are correct regarding: the pattern number, the color and the width. Make certain you have sufficient quantity on hand to complete the job and that you are aware of the pattern repeat (if any) as well as the directional method for installation. Be aware that this is a natural product and will exhibit color or pattern variations. This variation is normal and to be expected and enhances the beauty of the material.

Inspect the yardage as you unroll it. Look for obvious flaws. No credit will be allowed for cut material, especially if you have incorrect material or a wrong colorway in your hands. Cut material cannot be returned for credit. Application of the material is interpreted as your acceptance of the materials as well as the conditions for application of them.

**Surface  
Preparation:**

**NO CREDIT WILL BE ALLOWED FOR CUTTING OR INSTALLING INCORRECT PATTERNS OR COLORWAYS.** Application of materials is interpreted as acceptance of the material and conditions of the installation.

Should you have any questions please contact your local MDC sales representative or MDC Customer Care at 800-621-4006 before proceeding.

A few surfaces to avoid: non-porous or sealed, dusty, chalky or greasy. Loose, uneven or unstable surfaces. Glossy paints. New or uncured plaster or unprimed existing paint coatings. Mildewed surfaces. Existing wallcoverings must be removed along with any/all remaining adhesive.

**Preparing for  
Installation:**

Surfaces you want: clean, dust free, smooth firm, uniformly colored, fully opaque and primed with Roman PRO R35 Adhesion Promoting primer and allow to fully dry. All surfaces should be tested by the installer to determine the suitable adherence of any existing coating as well as the bonding of the primer to the underlying layer(s).

These goods arrive pre-trimmed in width, so no additional trimming is necessary. Simply unroll any currently rolled panels and allow them to relax for 24 hours minimum in the environment where the goods are being installed. Review the material for any obvious concerns. Discuss with site team and/or designer to determine the specific order by which you wish to sequence the received panels and then assign the order of installation of your panels based on the appearance desired by the site/design team.

These goods arrive pre-trimmed in width, so no additional trimming is necessary. Simply unroll any currently rolled panels and allow them to relax for 24 hours minimum in the environment where the goods are being installed. Review the material for any obvious concerns. Discuss with site team and/or designer to determine the specific order by which you wish to sequence the received panels and then assign the order of installation of your panels based on the appearance desired by the site/design team.

**Adhesive:**

Use Roman PRO 732 Extra Duty Clay adhesive for best results. Do not dilute. Using another type of adhesive will solely at the risk of the installer.

**Installation:** Handle with care at all times. Avoid creasing the goods. All cuts are to be made with a snap off utility knife blade for best results. Use a fresh blade edge for each cut. Apply a medium coating of Roman PRO-732 adhesive to the back of the sheets using a 3/8" nap roller sleeve. Align the sheet which you have designated as sheet #1 to a plumb line. Smooth carefully into place while eliminating all air pockets. Repeat with those sheets you designated as #2 and #3. Do not alternate the direction of the sheets. Install as non-reversed, straight hang (unless factory labeling indicates otherwise.) Butt seam to avoid pushing adhesive up and out of the seam or onto the face of the material. Sweep firmly into place using clean non-metallic smoothing tools which are free of all nicks or burrs. Medium density foam or rubber rollers may be used. Do not use hard rollers along the seam corridors.

Stand back and examine the overall appearance. If acceptable to all who must approve, then they should authorize installation to continue. Be aware that this is the point to catch any issue. No labor beyond these three sheets will be accepted. If you see any reason to NOT continue, then contact Customer Care or your local rep to state why you will not proceed. Please note that certain materials may show more variation while moisture remains present. Those aspects should no longer be present after a 24 hour dry out time. For certain patterns, some subtle variations are inherent and should be deemed acceptable.

Continue by using full width sheets. Do not drop in headers. Stay in the sequence which you have designated. Work clean and keep adhesive off the face of the material at all times. If you do get the clay adhesive on the face of the material, clean it immediately from the stone veneer using a dampened clean sponge and clean water. Do not add bleach or detergent. Blot to dry.

**Test Hanging:** **STOP AFTER APPLYING 3 STRIPS.** If there are any excessive variations in color and/or color match, this should be immediately communicated to your local MDC sales representative or MDC Customer Care at 800-621-4006 before proceeding further with installation. StoneWerks wallcoverings will tend to slightly panel.

**MDC assumes no responsibility for the installation of material beyond 3 strips. Under no circumstances will MDC be responsible for labor. This is an industry standard.**

The above information is intended only as a guideline; the installer has final responsibility for proper installation.

**Maintenance:** Use only a white cloth dampened with clean water using a dabbing motion to maintain cleanliness of the StoneWerks wallcovering. Do not use any cleaning agents as this will react with the product and may affect the color and appearance. Blot to dry.

**Real Stone overlay (Slate and Quartzite) with fabric backing.**

StoneWerks is real stone texture, grain, color, and appearance in an incredibly thin veneer with reinforced cotton fabric for complete strength and flexibility of the sheet.


**SIZES: Standard Size is 36" x 96" (special sizes are also available on request).**

**THICKNESS:**

0.7 - 1.0 mm (depending upon the stone).

**WEIGHT:**

.18 - .25 lbs. SF (depending upon the stone).

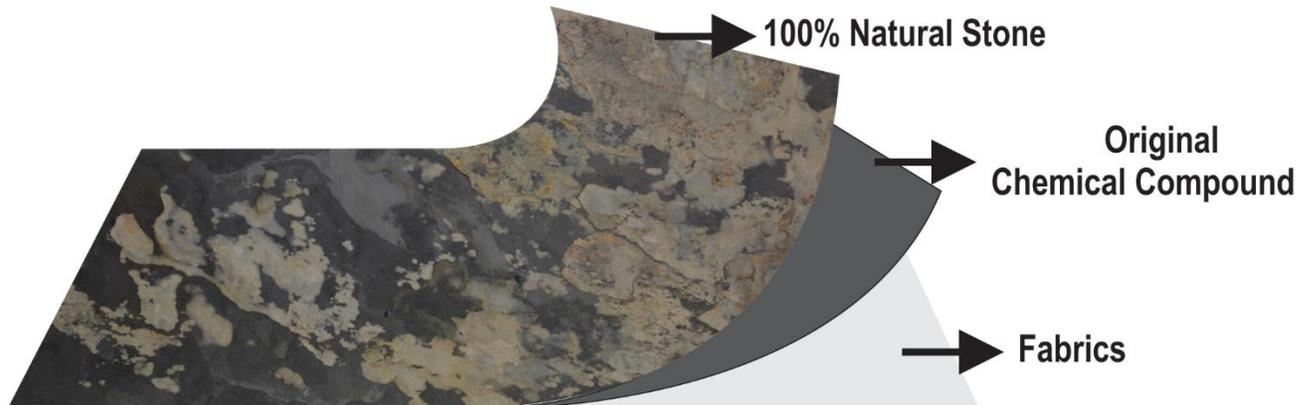

**COMPOSITION:**

StoneWerks is natural stone veneer laminated to a fabric substrate.

**APPLICATION:**

StoneWerks offers an even wider range of opportunities in use because of its extreme flexibility and uniqueness. The material can be applied on various substrates: Walls, Ceilings, Interiors, Furniture, Cabinets, Doors, etc. (Not suitable for floors or exterior use)

**TOOLS:**

Standard tools can be used for application. Fabric can also cut with a carpet knife or sharp scissors.

**SEALING:**

StoneWerks ships pre-sealed to protect and seal the face from scuffing and adhesives during installation and handling.

**VARIATIONS:**

Since StoneWerks is a natural product, color and texture variances are not defects within the material, but are inherent to it and part of the natural beauty of quarried materials. These materials cannot be guaranteed to match dye-lot to dye-lot, so it is recommended that orders take into account future maintenance or re-fit possibilities.

**STORAGE:**

StoneWerks sheets should be stored flat in a clean environment.