

**Check Before
Cutting:**

First, confirm that all of the materials you have received match what was ordered and are correct regarding: the pattern number, the color and the width. Make certain you have sufficient quantity on hand to complete the job and that you are aware of the pattern repeat (if any) as well as the directional method for installation. Be aware that this is a natural product and will exhibit color or pattern variations. This variation is normal and to be expected and enhances the beauty of the material.

Inspect the yardage as you unroll it. Look for obvious flaws. No credit will be allowed for cut material, especially if you have incorrect material or a wrong colorway in your hands. Cut material cannot be returned for credit. Application of the material is interpreted as your acceptance of the materials as well as the conditions for application of them.

**Surface
Preparation:**

NO CREDIT WILL BE ALLOWED FOR CUTTING OR INSTALLING INCORRECT PATTERNS OR COLORWAYS. Application of materials is interpreted as acceptance of the material and conditions of the installation.

Should you have any questions please contact your local MDC sales representative or MDC Customer Care at 800-621-4006 before proceeding.

A few surfaces to avoid: non-porous or sealed, dusty, chalky or greasy. Loose, uneven or unstable surfaces. Glossy paints. New or uncured plaster or unprimed existing paint coatings. Mildewed surfaces. Existing wallcoverings must be removed along with any/all remaining adhesive.

**Preparing for
Installation:**

Surfaces you want: clean, dust free, smooth firm, uniformly colored, fully opaque and primed with Roman PRO R35 Adhesion Promoting primer and allow to fully dry. All surfaces should be tested by the installer to determine the suitable adherence of any existing coating as well as the bonding of the primer to the underlying layer(s).

These goods are all pre-trimmed, so no table trimming is necessary. Unroll the rolls and allow them to relax overnight in the environment the goods are being installed in. Review the material for any obvious concerns. Material can be cut to length using a sharp carpet knife for best results.

Adhesive:

Use Roman PRO 732 Extra Duty Clay adhesive for best results. Do not dilute. Using another type of adhesive will be solely at the risk of the installer.

Installation: Handle with care at all times. Avoid creasing the goods. Apply a medium coating of PRO 732 adhesive to the back of the sheets using a 3/8" nap roller. Align your first edge with a plumb line and smooth carefully into place while eliminating all air pockets. Repeat with sheets #2 and #3. Do not alternate the direction of these sheets. Install as non-reversed, straight hang method unless roll labels are otherwise marked to require alternating sheets to be reversed. Butt seam carefully to avoid pushing adhesive up out of the seam. Sweep with clean, burr and nick free smoothers. Medium foam rollers may also be used for this. Do not use hard seam rollers along the seam corridors.

Stand back and examine the overall appearance. If acceptable to all who must approve, then they should authorize installation to continue. Be aware that this is the point to catch any issue. No labor beyond these three sheets will be accepted. If you see any reason to NOT continue, then contact Customer Care or your local rep to state why you will not proceed. Please note that certain materials may show more variation while moisture remains present. Those aspects should no longer be present after a 24 hour dry out time. For certain patterns, some subtle variations are inherent and should be deemed acceptable.

Continue by using full width sheets. Do not drop in headers. Stay in sequence. Attempt to keep adhesive off the face of the material at all times. If it does come into contact, clean any adhesive immediately from the surface using a dampened clean sponge and clean water. Do not add bleach or detergent. Blot to dry.

Test Hanging: **STOP AFTER APPLYING 3 STRIPS.** If there are any excessive variations in color and/or color match, this should be immediately communicated to your local MDC sales representative or MDC Customer Care at 800-621-4006 before proceeding further with installation. StoneWerks wallcoverings will tend to slightly panel.

MDC assumes no responsibility for the installation of material beyond 3 strips. Under no circumstances will MDC be responsible for labor. This is an industry standard.

The above information is intended only as a guideline; the installer has final responsibility for proper installation.

Maintenance: Use only a white cloth dampened with clean water using a dabbing motion to maintain cleanliness of the StoneWerks wallcovering. Do not use any cleaning agents as this will react with the product and may affect the color and appearance. Blot to dry.

Real Stone overlay (Slate and Quartzite) with fabric backing.

StoneWerks is real stone texture, grain, color, and appearance in an incredibly thin veneer with reinforced cotton fabric for complete strength and flexibility of the sheet.


SIZES: Standard Size is 36" x 96" (special sizes are also available on request).

THICKNESS:

0.7 - 1.0 mm (depending upon the stone).

WEIGHT:

.18 - .25 lbs. SF (depending upon the stone).

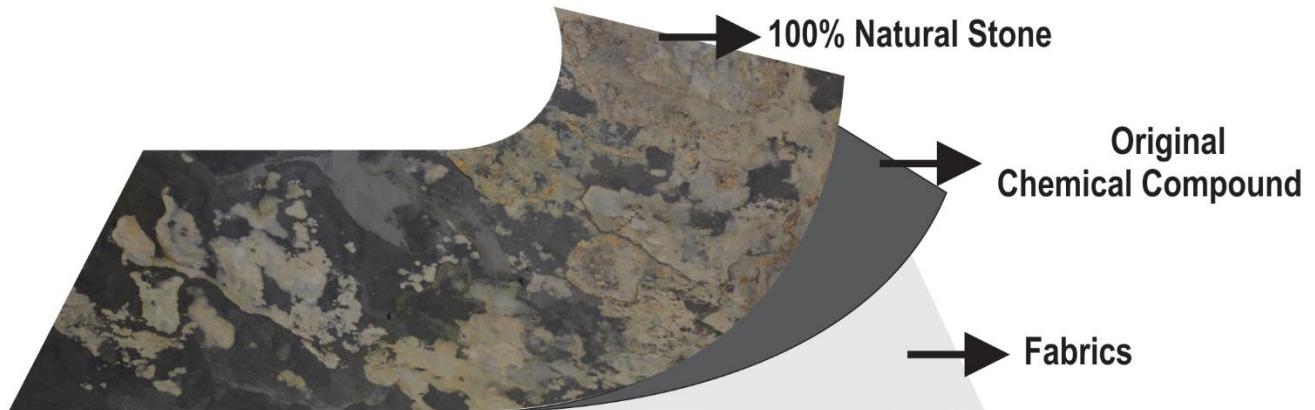

COMPOSITION:

StoneWerks is natural stone veneer laminated to a fabric substrate.

APPLICATION:

StoneWerks offers an even wider range of opportunities in use because of its extreme flexibility and uniqueness. The material can be applied on various substrates: Walls, Ceilings, Interiors, Furniture, Cabinets, Doors, etc. (Not suitable for floors or exterior use)

TOOLS:

Standard tools can be used for application. Fabric can also cut with a carpet knife or sharp scissors.

SEALING:

StoneWerks ships pre-sealed to protect and seal the face from scuffing and adhesives during installation and handling.

VARIATIONS:

Since StoneWerks is a natural product, color and texture variances are not defects within the material, but are inherent to it and part of the natural beauty of quarried materials. These materials cannot be guaranteed to match dye-lot to dye-lot, so it is recommended that orders take into account future maintenance or re-fit possibilities.

STORAGE:

StoneWerks sheets should be stored flat in a clean environment.