


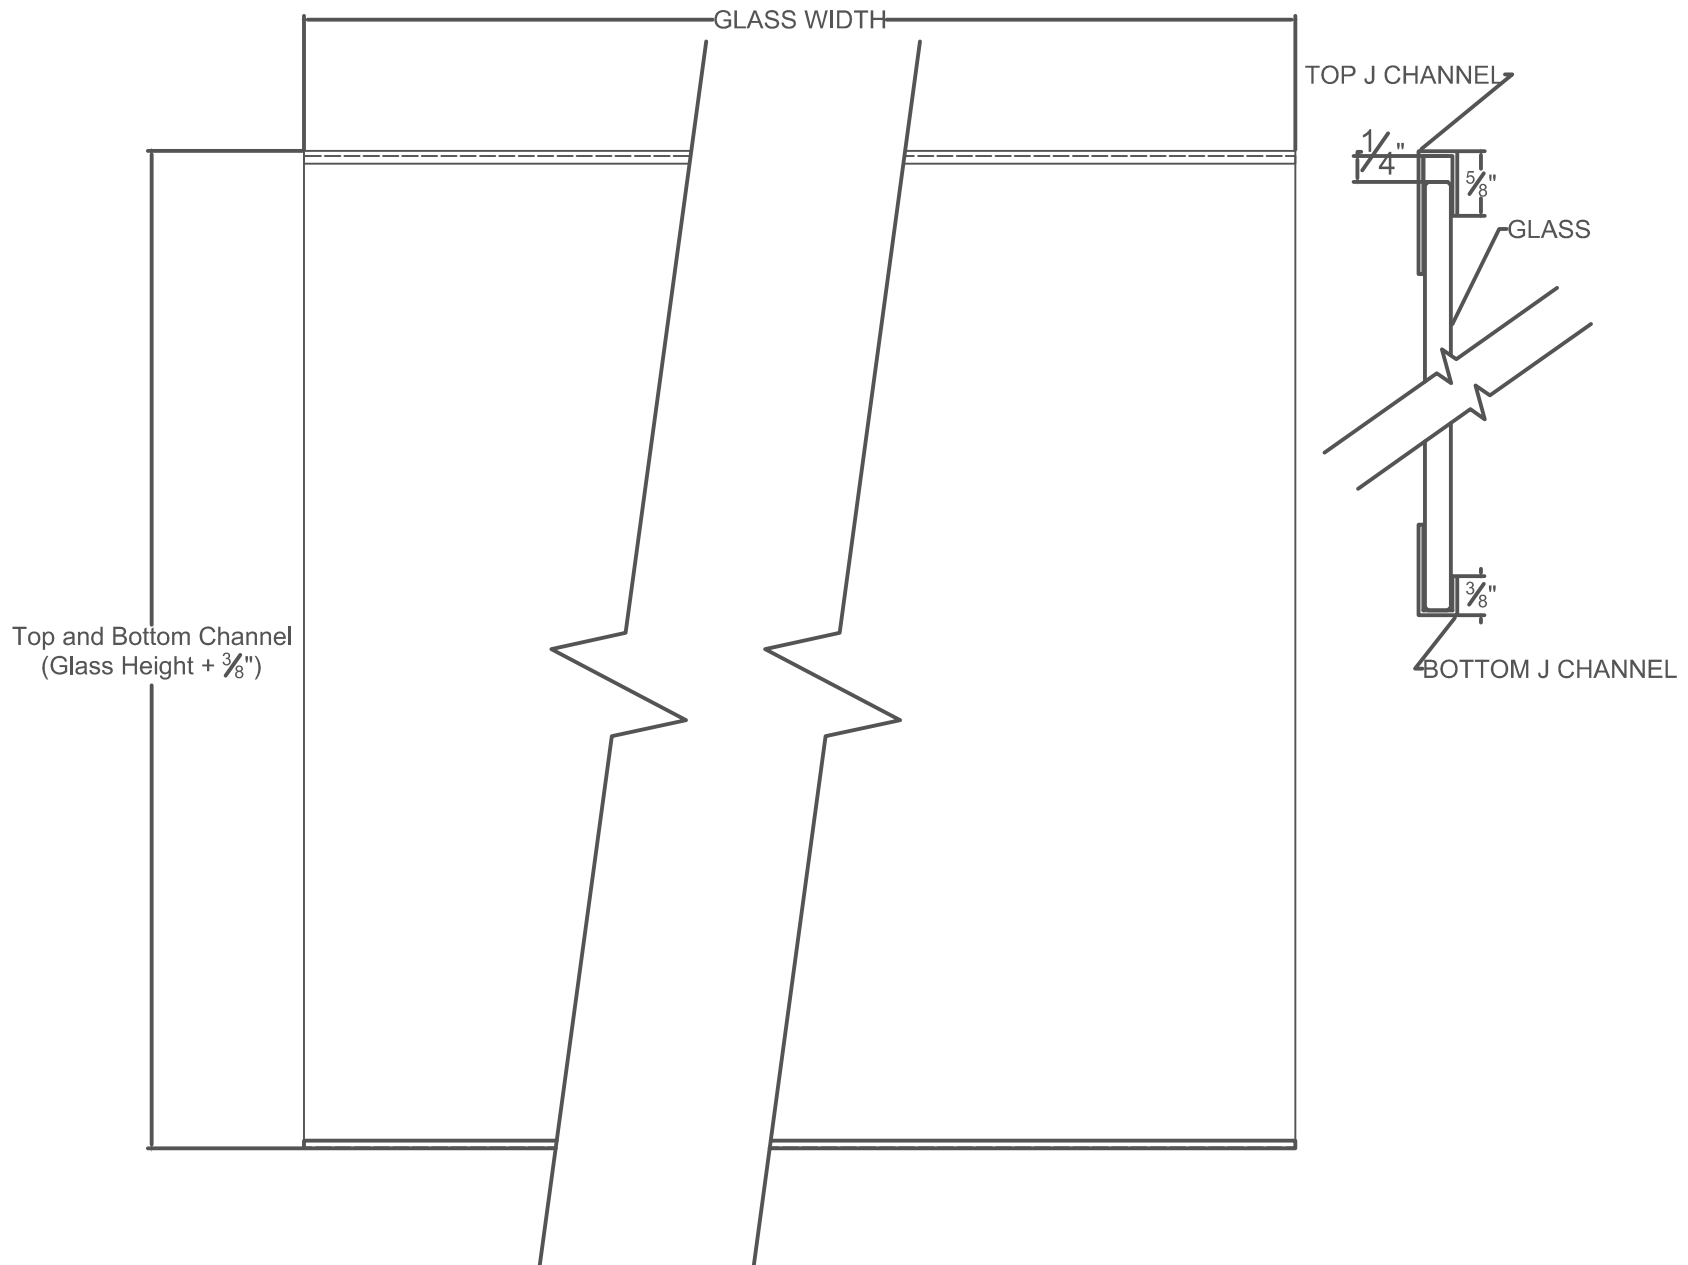

1. Always anchor the top and bottom aluminum J channel into the structure of framing if possible.
 * If install glass on Sheet rock must use plastic anchors.
 2. Both Top and Bottom J channels must be installed level and parallel to each other.
 3. Distance between the top and bottom J channel is $\frac{3}{8}$ \" bigger than the glass height.
 4. Once both aluminum J channels are installed slide the top of the glass into the top J channel then let the glass slide into the bottom J channel.
- ***NOTE: Must use suction cup for glass installation.