MDC
INTERIOR SOLUTIONS

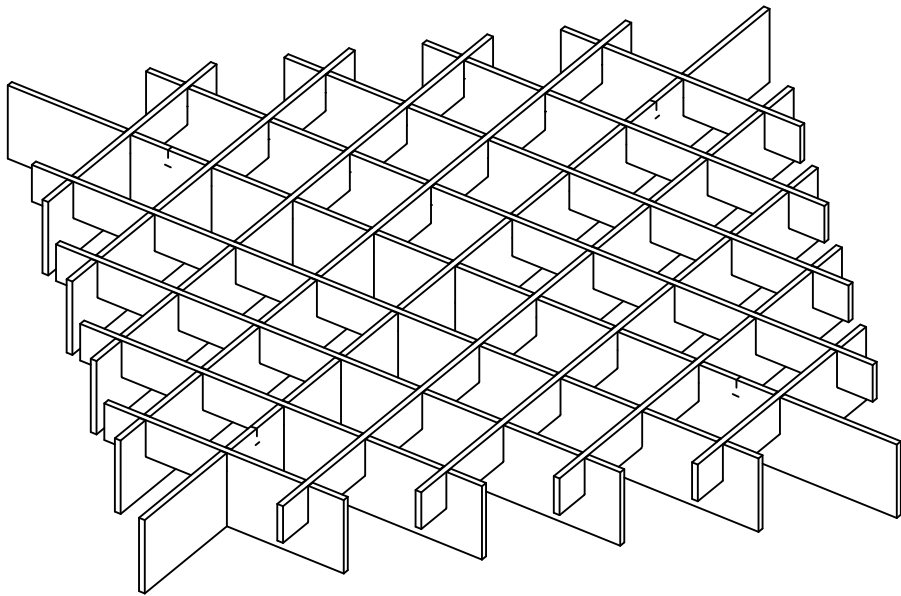# Zintra Cloud Drante
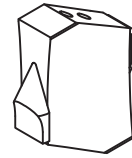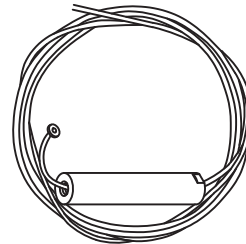# **Installation Instructions**

FINISHED ASSEMBLY

PARTS LIST

**HANGER BOLTS**

ADJUSTABLE FASTENER

CABLE

PROFILE 1A   1 OFF

PROFILE 1B   1 OFF

PROFILE 2   4 OFF

PROFILE 3   4 OFF
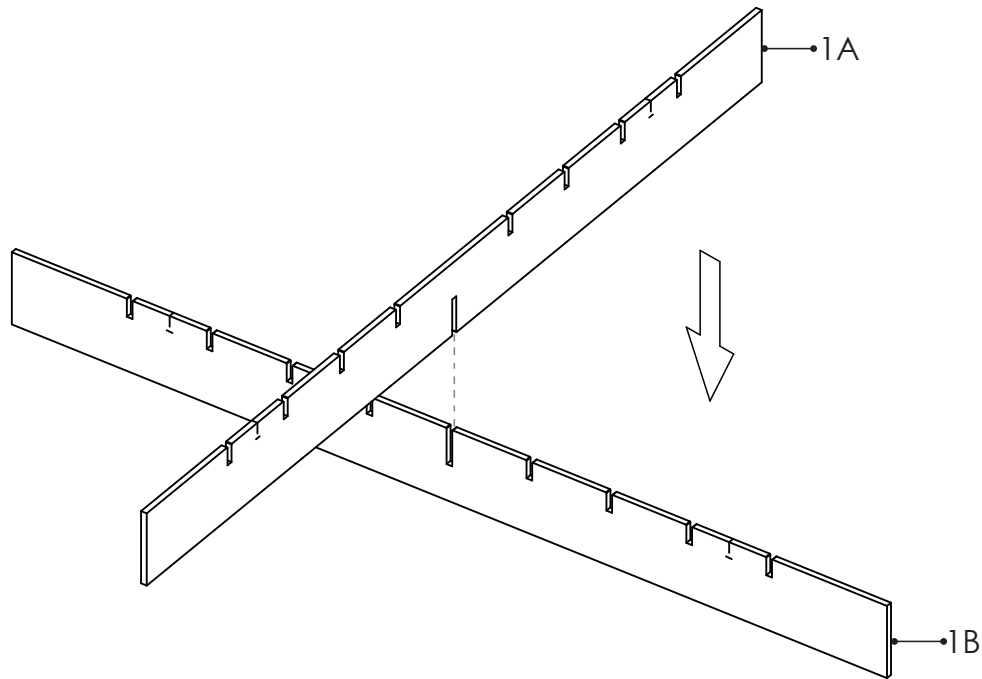
PROFILE 4   4 OFF

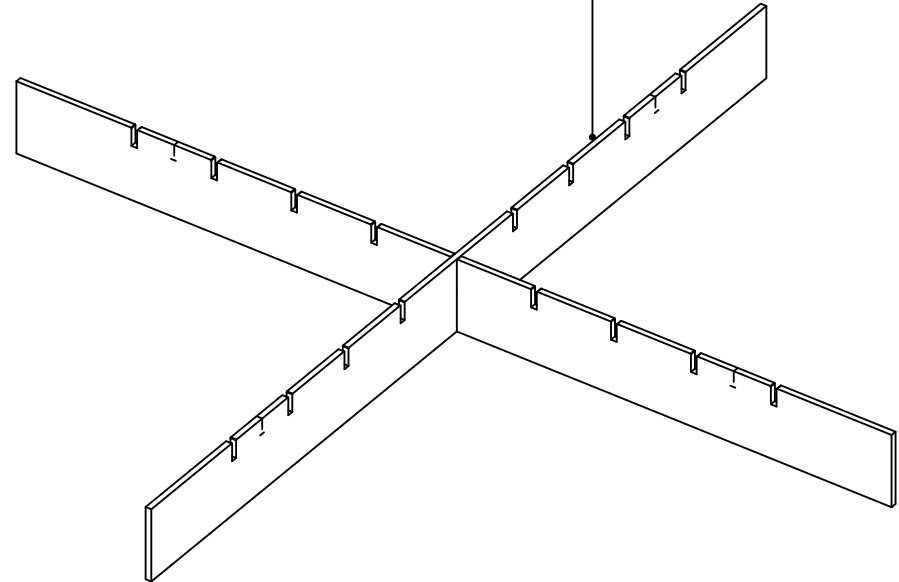PROFILE 5   4 OFF

STEP 1

PARTIAL ASSEMBLY X

1A

1B

Assemble cloud profiles 1A & 1B as shown.
Note position of mounting slots.
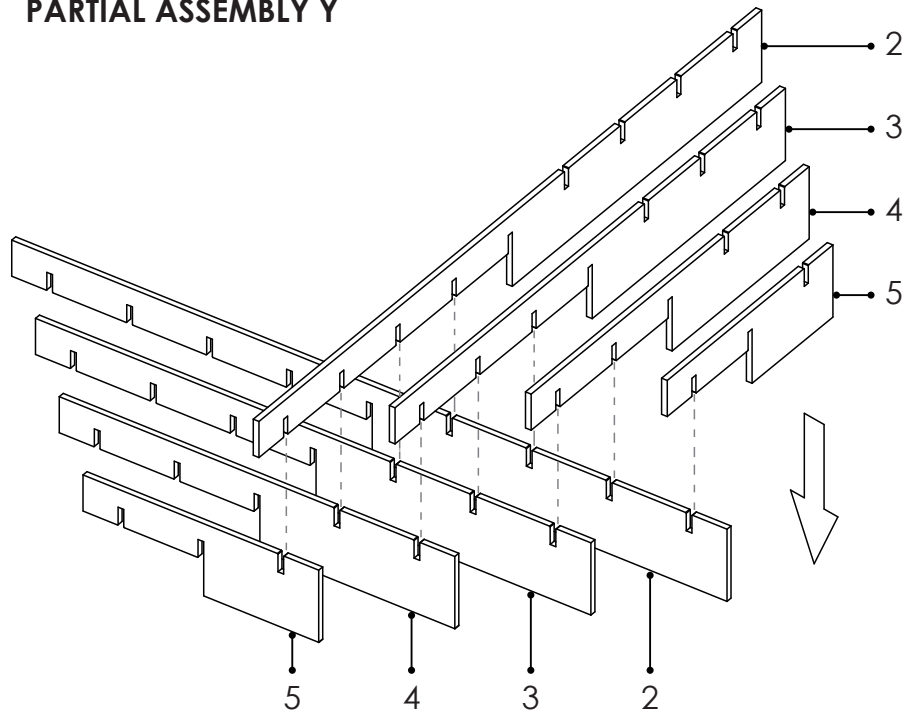
STEP 2

PARTIAL ASSEMBLY X

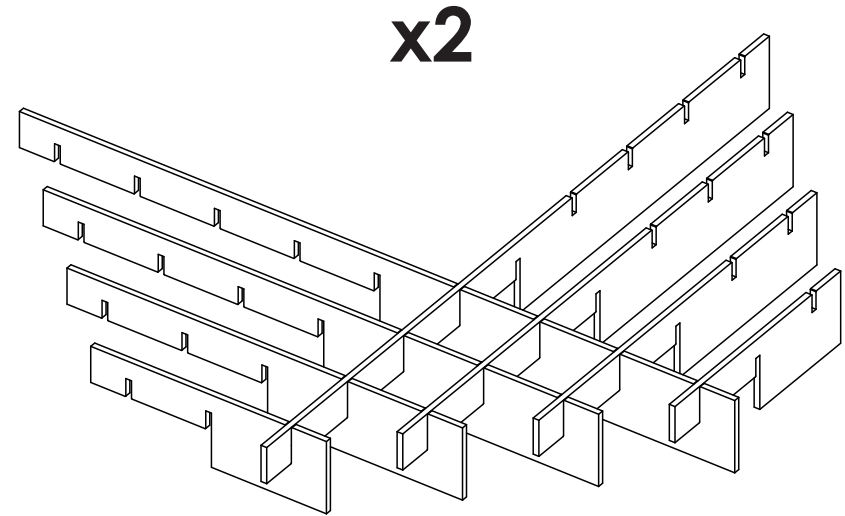"Partial Assembly X" is complete. Put this aside for later.

STEP 3

PARTIAL ASSEMBLY Y

Assemble cloud profiles 5,4,3 & 2 as shown.

STEP 4

x2

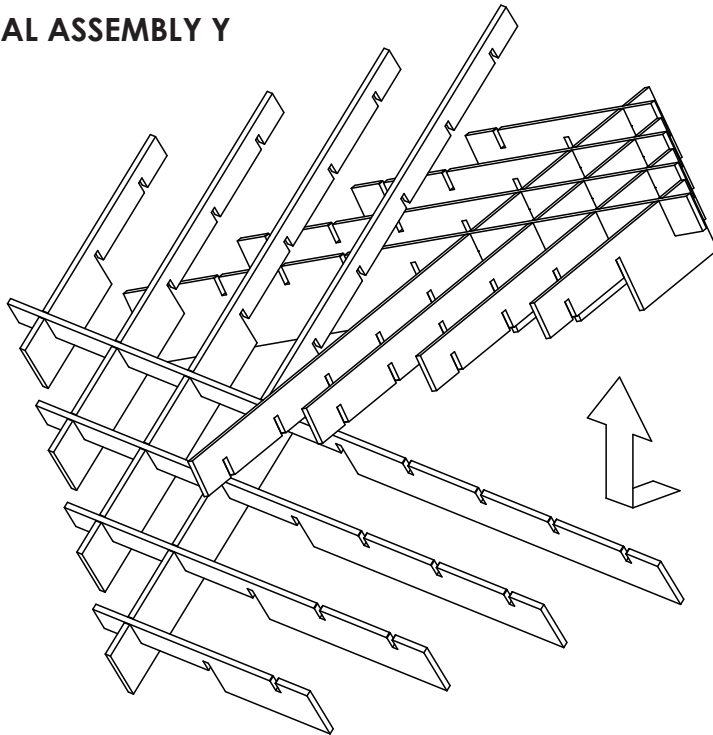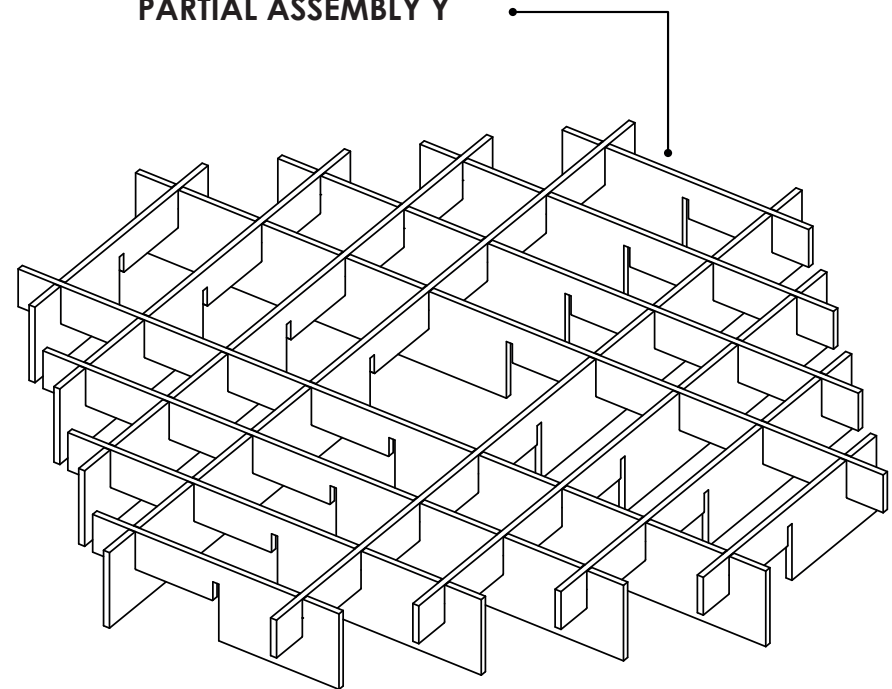Create 2 of the above assemblies.

STEP 5

PARTIAL ASSEMBLY Y

Interlock the two assemblies created in the previous step.

STEP 6

PARTIAL ASSEMBLY Y
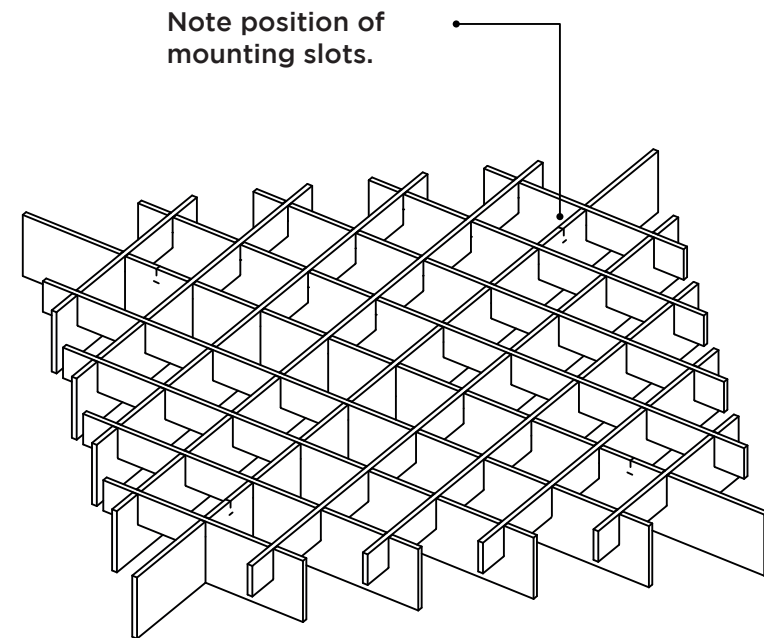

"Partial Assembly "Y" is complete. Put this aside for later.

STEP 7

PARTIAL ASSEM. Y
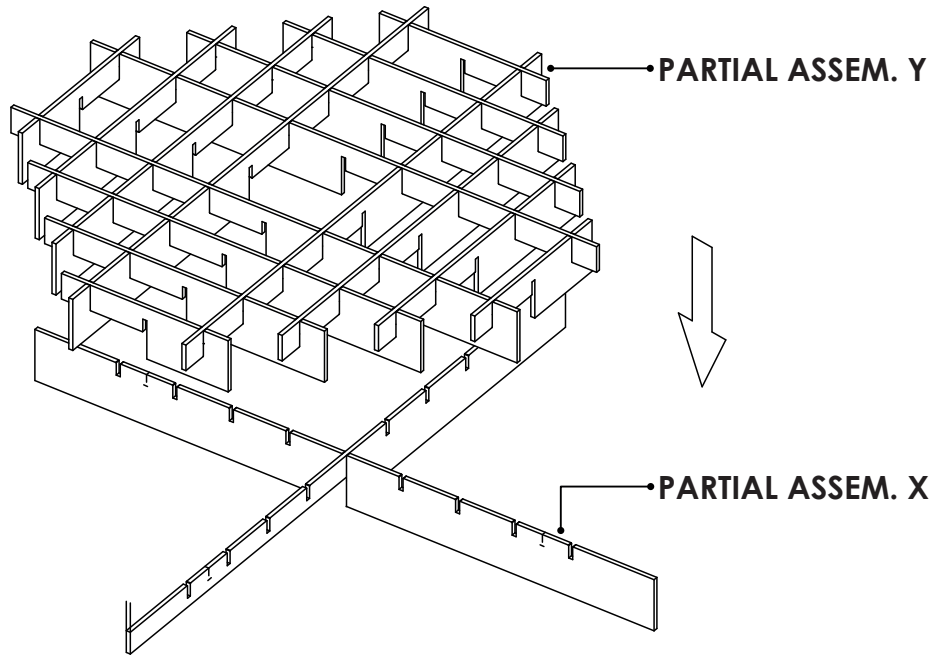
PARTIAL ASSEM. X

Join "Partial Assembly X" with "Partial Assembly Y" as shown.

STEP 8

Note position of mounting slots.

Assembly is complete.

STEP 9

Place cloud assembly up to ceiling in desired location. Mark position of **2 x** through holes which correspond to the center of each "set" of mounting slits on the mounting profile. Test that hole position is correct by temporarily suspending cloud on wires as shown in STEP 7 & 8.

STEP 10

¼"-20 HANGER BOLT

¼"-20 HANGER BOLT

SWAGE END

BARREL

3" [77mm]

1½" [39mm]   1½" [39mm]
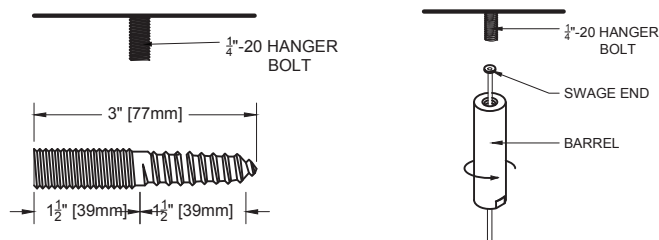
Install the 1/4"-20 hanger bolts to the substrate. The supplied hanger bolts are intended for use in wood only. For other substrates the installer will need to source the appropriate hardware.

STEP 11
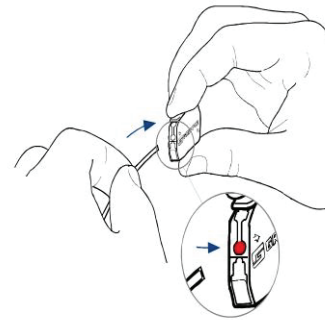
Feed swaged wire through tip of 'wire adjuster' (as shown). Push button (shown in grey) to adjust wire length. Release the button to lock in place.
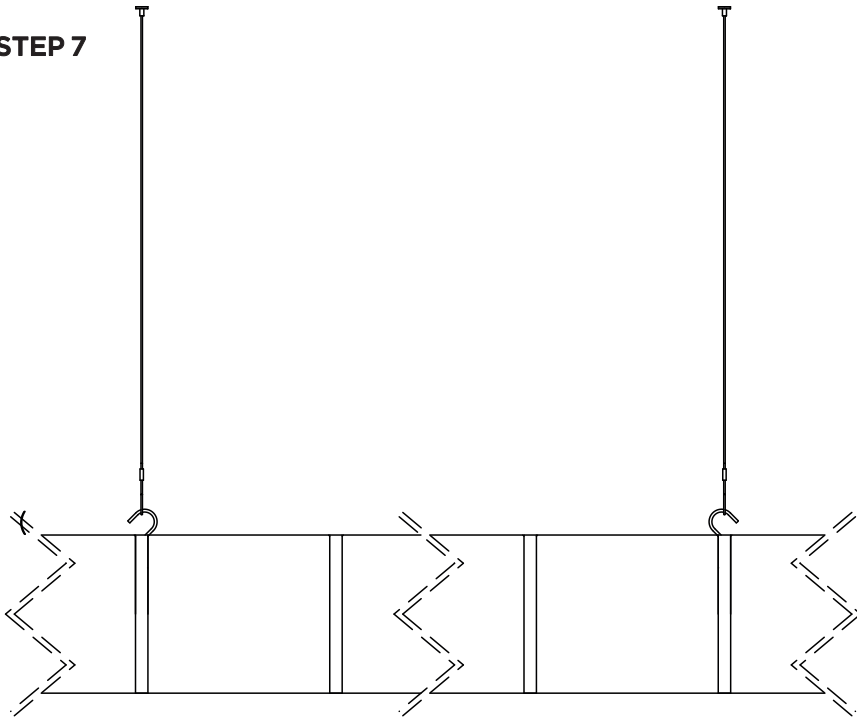
STEP 12
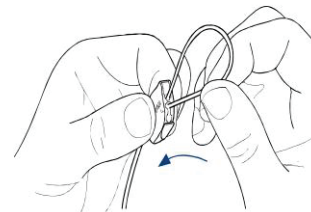
Insert the plain end of the cable through one side of the adjustable fastener. Loop the wire through the hole in the mounting profile and around the edge of the mounting profile at the predetermined locations. Re-insert the plain end of the cable through the remaining side of the adjustable fastener.

STEP 7

STEP 8
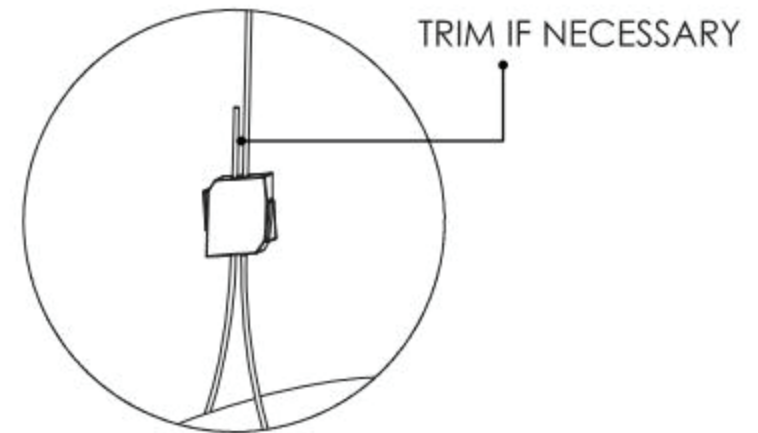
TRIM IF NECESSARY

Once the Cloud is properly suspended, trim the excess cable. The cable is adjustable by depressing tab on appropriate side.

Re-adjust wire length as explained in STEP 5 until cloud hangs level.